

Whitehill

Spindle Tools Ltd

Setting Vari Angle Head With Digital Angle Gauge

With Vari Angle Head on shaft:




Pic.1

1. Slide Gauge onto flat body of cutterhead - centrally on head (Pic.1)




Pic.2

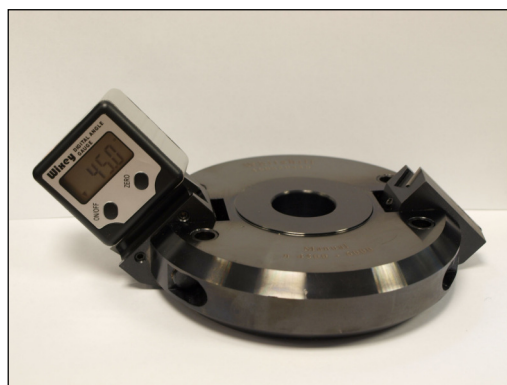

Pic.3

2. Press button on gauge to "0" (Pic.2) remove from body and place on edge of cutting jaw (Pic.3) Using the two locating screws on bottom of gauge to locate parallel with back of the cutting jaw;

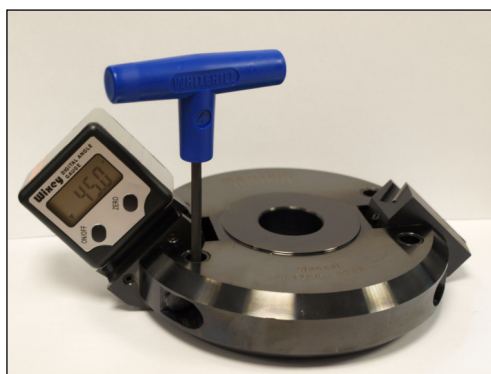

Pic.4

3. Using allen key unlock jaw and rotate to required angle - lock into position (Pic.4) To set other side rotate head and repeat as above.

Whitehill Spindle Tools Ltd, 2 - 8 Bolton Road, Luton, Beds LU1 3HR

Tel: 01582736881
Fax: 01582488987

www.whitehill-tools.com
E-mail: sales@whitehill-tools.com